

Dodge Ram 1500 14S-18S-24S

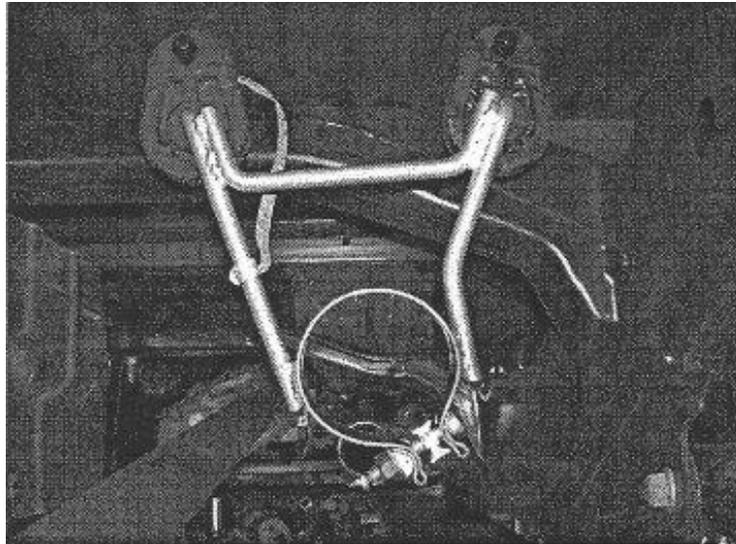


Figure 1

Tools needed for install

15mm Socket with Ratchet or Air Ratchet

Pry Bar

WD-40 or Penetrating Oil

Begin by spraying all rubber hangers rear of muffler and both inlet and outlet necks on the muffler.

Loosen the 15mm nuts on the tailpipe and side of muffler and then remove the Tailpipe from neck. (*
Note: The Tailpipe will slide out of the hanger)

Loosen the 15mm nut on front muffler clamp.

Remove the factory muffler, leaving the rubber hangers on the truck in place.

Put the Mufflex hanger in rubber Push in place from rear (*See Figure 1*)

Slide the Mufflex Retro-Fit muffler in place using the rear hanger for alignment.

Put the factory tailpipe back in the factory rubber hanger and slide the tailpipe back into the muffler and then snug up the 3" inlet clamp.

(**Note: DO NOT USE SLITS IN INLET/OUTLET FOR ALIGNMENT. THEY ARE FOR CLAMP COMPRESSION ONLY! DO NOT TIGHTEN UP YET.*)

Align the tailpipe and snug the tailpipe clamp.

After checking the alignment of the tailpipe, begin tightening the clamps from front to back.

(Make sure the tailpipe clamps are at the very edge of the muffler outlet or they will not compress onto the tailpipe)