

Jeep SRT8 Rear Muffler Bypass Kit

Tools Recommended:

- [1] Sawzall with metal cutting blade
- [1] 15MM Socket [With impact gun]
- [1] WD-40 Spray (recommended)

Below is a list of Mufflex supplied parts:

- [1] Rear muffler bypass kit
- [2] 2.75" Accuseal Clamps
- [2] 3" Accuseal Clamps
- [2] 5" Stainless steel exhaust tips

Driver Side: Loosen Factory band clamp, spray rubber hangers w/WD-40 and “pop” muffler pins out of rubber hangers. After hangers are out, remove driver’s side muffler. Put 2.75” clamp on muffler bypass, then slide drivers side muffler bypass onto exhaust pipe. Then slide 3” Driver side clamp/hanger on pipe. This is the clamp that also fastens the tip to exhaust pipe. (**SEE PHOTO B**)

Passengers Side: Spray rubber hangers and then “pop” rubber hangers off of factory hangers. With sawzall cut tube just before factory hanger (**SEE PHOTO A**) then remove muffler from vehicle. Put 2.75” clamp with hanger on muffler bypass then slide passenger side muffler bypass onto exhaust pipe. 3” “pass” side clamp/hanger on pipe. This is the clamp that also fastens tip to exhaust pipe. (**SEE PHOTO C**) Snug 2.75” clamps down onto both rear exhaust pipes (but do not tighten yet). Install 5” tips and align with bumper bezel and begin sequence of tightening the clamps. Keeping the tips aligned in the bezel. When all is **Aligned**, **tighten all clamps with 1/2 Inch drive impact tools**.



Photo A



Photo B

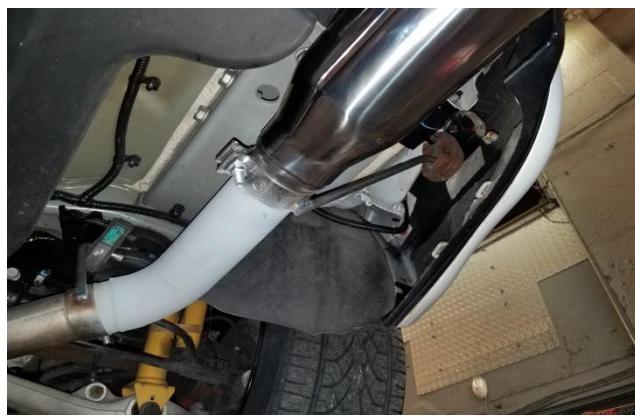


Photo C